

# HOW TO OPERATE NATIONAL ROOM AIR CONDITIONER

MODELS  
CS-

## REMOTE CONTROL PART NAMES

### REMOTE CONTROL

DISPLAY


ON / OFF BUTTON

OPERATING MODE  
SELECTOR

POWERFUL BUTTON

FAN SPEED SELECTOR

UP / DOWN LOUVER  
CONTROL BUTTON

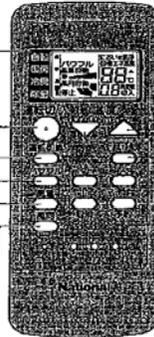

TEMPERATURE SETTING  
BUTTONS

ODOR REMOVING BUTTON


TO SET TIMER OPERATION

切 : OFF TIMER BUTTON  
入 : ON TIMER BUTTON  
取消 : CANCEL BUTTON  
予約 : PROGRAM BUTTON

## SETTING OPERATION MODE (AUTO, HEATING, COOLING, DRY)

 
**1** Press .

EACH TIME THE BUTTON IS PRESSED THE OPERATING MODE IS SHIFTED IN THE SEQUENCE SHOWN IN THE DISPLAY:



**2** Press .

The ON indicator will light. The indicator may flash during automatic or heating mode operation.

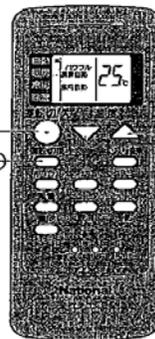

### TO CHANGE THE TEMPERATURE SETTING

- The temperature setting changes 1°C each time the button is pressed.
  - The adjustable temperature range is 16~30°C.
- Press to increase the temperature setting.  
Press to decrease the temperature setting.

### TO STOP

Press .  
(the 運転 indicator will go out).

## BATTERIES

 
- The remote control will operate for about one year with new batteries. When the signal fails to reach the same distance, the batteries should be replaced.
- When the battery power lowers, the remote control display will become dim or disappear.
- Replace both batteries at the same time using the same type of batteries.
- Because of possible differences in size, shape, and performance, do not use rechargeable (Ni-Cd) batteries.

## AIR FLOW DIRECTION AND SPEED CONTROL SETTING


### TO CHANGE THE AIR FLOW UP AND DOWN

Press .

- In addition to 「風向自動(AUTO)」, up / down air flow can be adjusted manually in five steps. The display will change



each time the button is pressed. (The display is a guide to the air flow direction.)

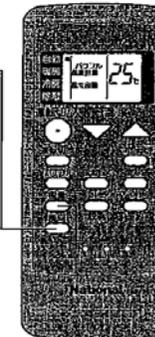

### TO CHANGE THE AIR FLOW SIDE TO SIDE

Manually move the tabs (one each on right and left) to adjust.

### CHANGE THE FAN SPEED

Press .

- In addition to 「風量自動(AUTO)」, the fan speed can be manually adjusted in five steps.

Fan speed increases as the number of indicator segments that are on increases.

## TO SET TIMER OPERATION

### Setting the OFF timer

Set the timer while the unit is operating. (The timer cannot be set when the unit is not operating.) The unit will stop operating after the set time has elapsed.

**1** Press (OFF) to select the timer setting.

- The timer setting will change in the sequence 0.5→1→2→3→4... 12 hours each time the button is pressed. 切(OFF) indicator will flash.

**2** Press .

- The timer indicator on the main unit will light on.
- 切(OFF) indicator will light in the remote control.

### To cancel the timer.

- Press the 取消 (CANCEL) button (the timer indicator on the main unit will turn off.)

### Set the ON timer

While the unit is either on or off. The unit will start operating after the set time has elapsed.

**1** Press (ON) to select the timer setting.


- The timer setting will change in the sequence 0.5→1→2→3→4... 12 hours each time the button is pressed. 入(ON) indicator will flash.

**2** Press .


- The timer indicator on the main unit will light on.
- 入(ON) indicator will light in the remote control.
- Operation will stop if TIMER is pressed during unit operation.


### To change the timer setting.

- Repeat the timer setting procedure.

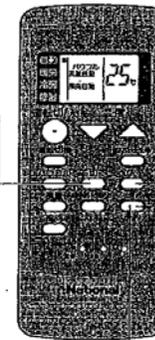

**AIR-CONDITIONER**  
NAME AND FUNCTION OF EACH SWITCH ON THE REMOTE CONTROLLER (CS-H\*\*7AZ)

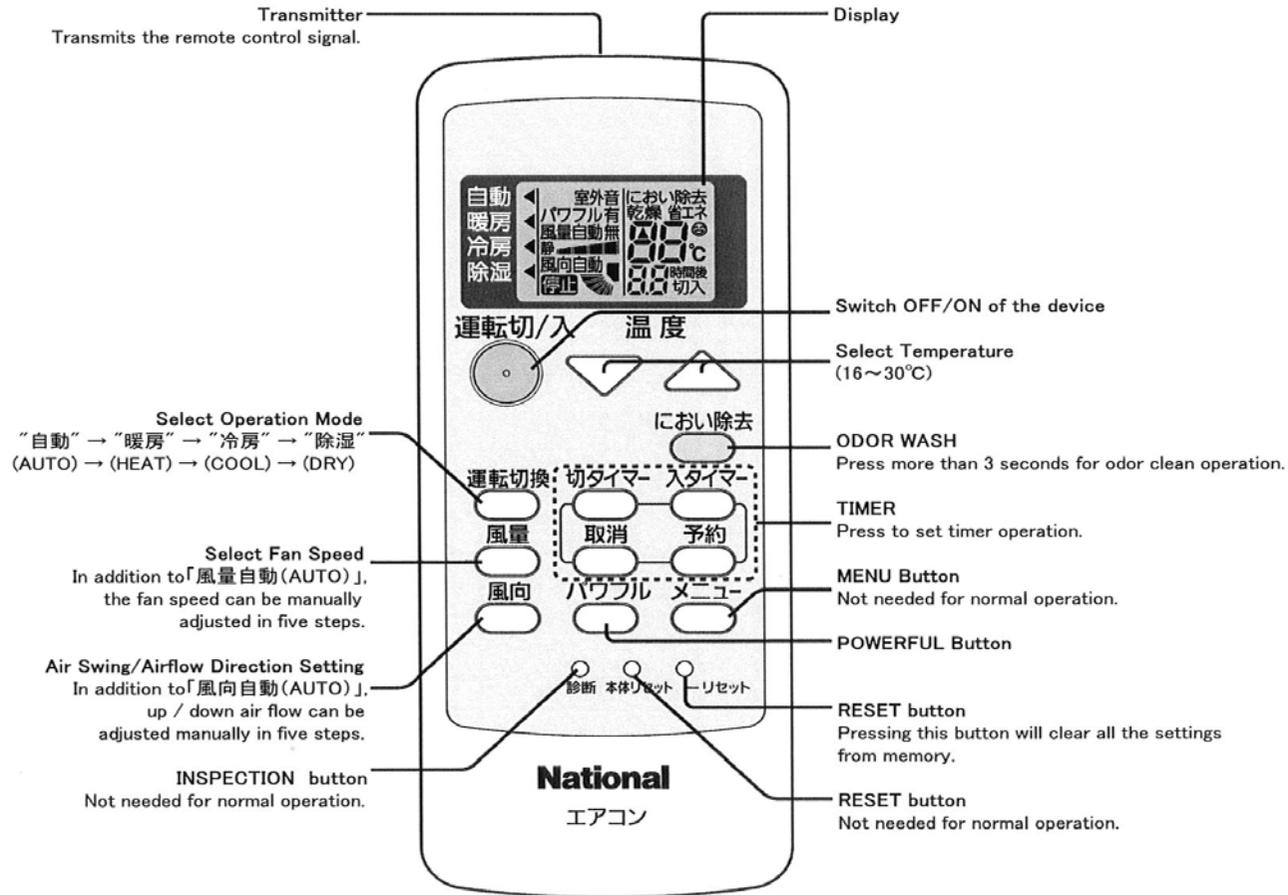

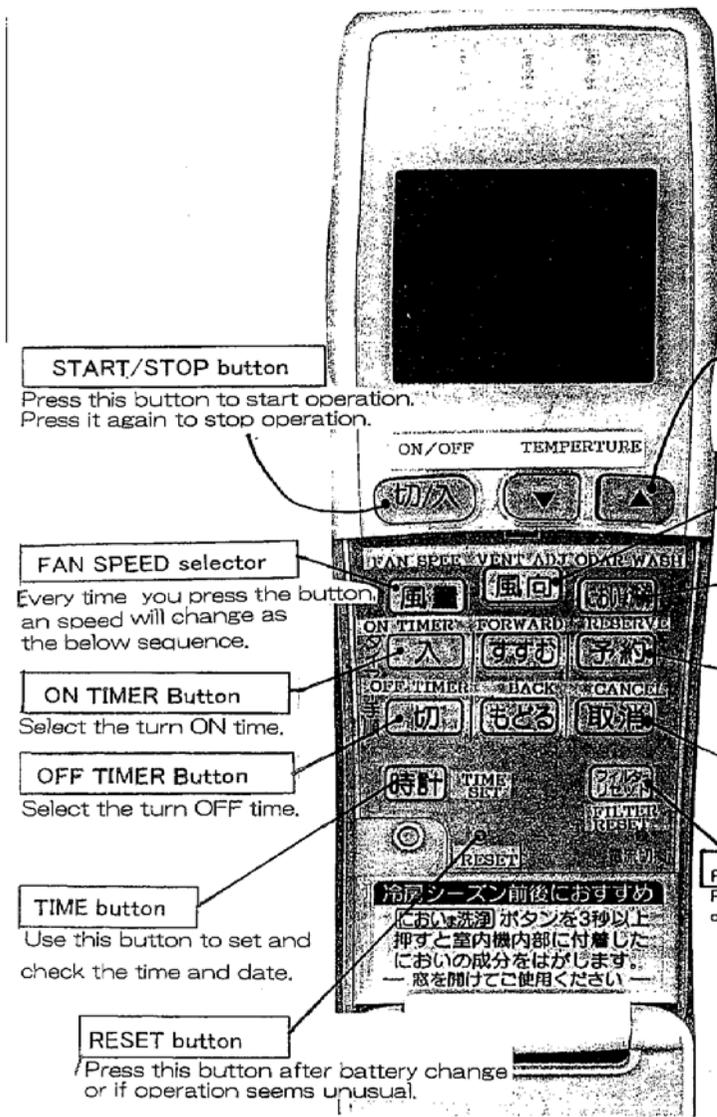

**START/STOP button**

Press this button to start operation.  
Press it again to stop operation.

**FAN SPEED selector**

Every time you press the button,  
an speed will change as  
the below sequence.

**ON TIMER Button**

Select the turn ON time.

**OFF TIMER Button**

Select the turn OFF time.

**TIME button**

Use this button to set and  
check the time and date.

**RESET button**

Press this button after battery change  
or if operation seems unusual.

**TEMPERATURE buttons**

Use these buttons to raise or lower  
the temperature setting.  
(Keep pressed, and the value will  
change more quickly.)

**AUTO SWING button**

Controls the angle of the  
horizontal air deflectors.

**ODOR WASH**

Press more than 3 seconds for  
odor clean operation.

**RESERVE button**

Time setting reservation.  
(Single reservation)

**CANCEL Button**

Cancel time reservation.

**FILTER RESET button**

Press to cancel the "FILTER" indicator light  
on the control panel.

冷房シーズン前後におすすめ  
におい・洗浄ボタンを3秒以上  
押しと室内機内部に付着した  
においの成分をはがします。  
—窓を開けてご使用ください—



**FUNCTION selector**

Use this button to selec  
the operating mode.  
Every time you press it,  
the mode will change

**OFF TIMER Button**

Select the turn OFF time.

GANeko

## AIR-CONDITIONER

### NAME AND FUNCTION OF EACH SWITCH ON THE REMOTE CONTROLLER (CZ-10RWU4)

