

**DEHUMIDIFY button**

Dehumidify mode direct selection.

**COOL button**

Cool mode direct selection.

**STOP button**

Press this button to **STOP** operation.

**AUTO SWING button**

Controls the angle of the horizontal air deflectors.

**FAN SPEED selector**

Every time you press the button, fan speed will change as the below sequence.

**VENTIRATION button**

Ventiration mode direct selection.

**CANCEL button**

Cancel time reservation.

**RESET button**

Press this button after battiry change or if operation seems unusual.

**AIR CLEAN button**

Press this button to start **AIR CLEAN** operation. Press it again to stop operation.

**TEMPERATURE button**

Use these buttons to raise or lower the temperature setting.

**HEAT button**

Heat mode direct selection.

**MILD WIND button**

Press this button to MILD WIND operation.

**AUTO SWING button**

Controls the angle of the horizontal air deflectors

**OFF TIMER button**

Select the turn **OFF** time.

**TIMER SET button**


Press this button to set ON/OFF Timer.

**ON TIMER button**

Select the turn **ON** time.

**INSPECTION button**

Not needed for normal operation.

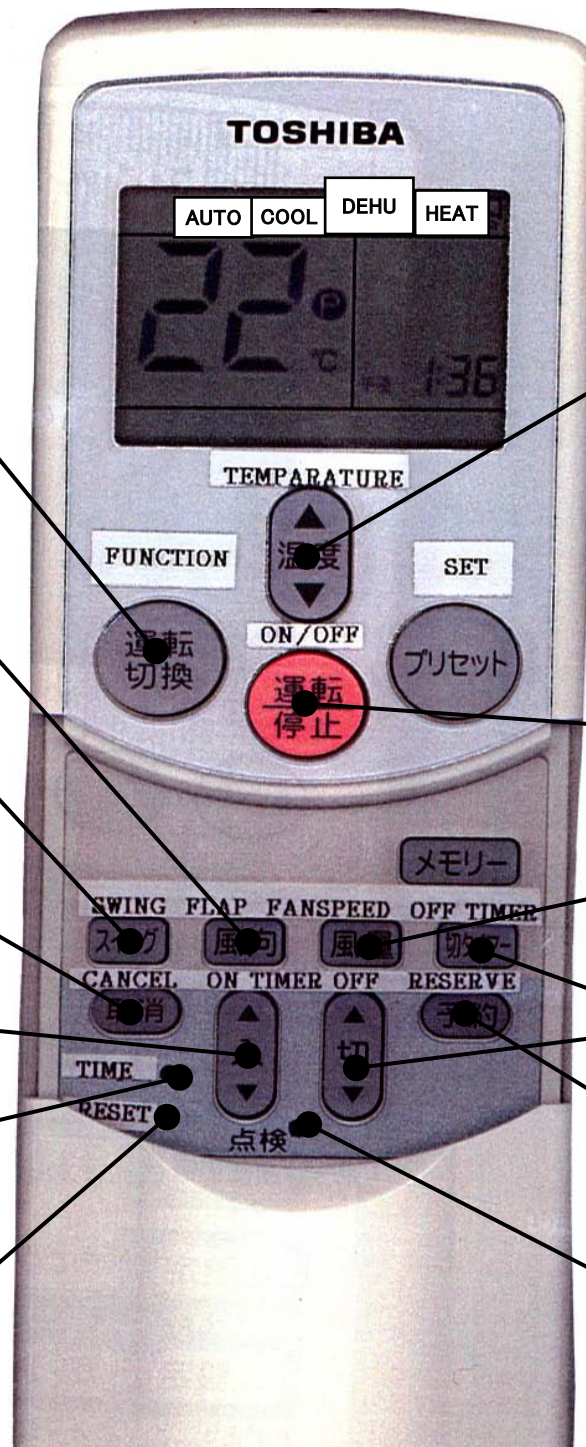

**FUNCTION button**

Use this button to select any one of the operation modes (AUTO→COOL→DEHUMIDIFY→HEAT)

**FLAP button**

Select the direction of flap.

**AUTO SWING button**

Controls the angle of the horizontal air deflectors.

**CANCEL button**

Cancel time reservation.

**ON TIMER button**

Cancel time reservation.

**TIME button**

Set the present time.

**RESET button**

Press this button after battery change or if operation seems unusual.

**TEMPERATURE button**

Use these buttons to raise or lower the temperature setting.

**ON/OFF button**

Press this button to start operation. Press it again to stop operation.

**FAN SPEED selector**

Every time you press the button, fan speed will change as the below sequence.

**OFF TIMER button**

Select the turn OFF time.

**TIMER SET button**

Press this button to set ON/OFF Timer.

**INSPECTION button**

Not needed for normal operation.