

START/STOP button

Press this button to start operation.
Press it again to stop operation.

HEAT button

Heat mode direct selection.

TEMPERATURE button

Use these buttons to raise or lower
the temperature setting.

FAN SPEED selector

Every time you press the button, fan speed
will change as the below sequence.

DEHUMIDIFY button

Dehumidify mode direct selection.

SOFT COOL button


SOFT COOL mode direct selection.

HUMIDITY button

Use these buttons to raise or lower
the humidity setting.

OFF TIMER button

Select the turn **OFF** time.

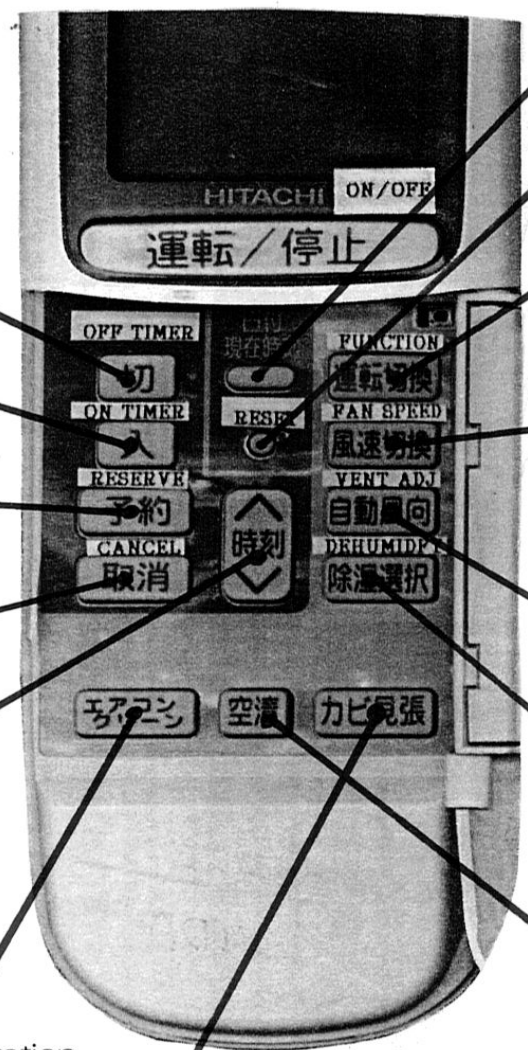

OFF-TIMER button
Select the turn OFF time.

ON-TIMER button
Select the turn ON time.

RESERVE button
Time setting reservation.
(Single reservation)

CANCEL button
Cancel time reservation.

TIMER control button
Use these buttons to set the timer.

**DRY OPERATION button for
Inside of indoor unit**
After cooling and dehumidifying operation,
Eliminate the humidity from inside of indoor
unit and prevent mold.

MOLD PREVENT button
Control the humidity and temperature to
prevent mold when the humidity is
over 70 percent.

TIME button
Use this button to set and check the time and date.

RESET button
Press this button after battery change
or if operation seems unusual.

FUNCTION selector
Use this button to select the operating mode.
Every time you press it, the mode will change
from (AUTO) to (HEAT) to (DEHUMIDIFY) to
(SOFT-COOL) to (COOL) and to (FAN) cyclically.

FAN SPEED selector
This determines the fan speed.
Every time you press this button,
the intensity of circulation will change from (AUTO)
to (HI) to (MED) to (LOW) to (EXTRA LOW)
(during the (FAN) mode, from (HI) to (MED) to (LOW)
to (EXTRA LOW).

AUTO VERTICAL SWING button
Controls the angle of the vertical air deflectors.

DEHUMIDIFY MODE selector
This determines DEHUMIDIFY MODE.
Every time you press this button,
DEHUMIDIFY MODE will change from
(LAUNDRY-DRY) to (CONDENSATION-PREVENTION)
to (40% DEHUMIDIFY) .

AIR CLEAN button
Use button to start air cleaning operation.

Signal emitting window/transmission sign

Point this window toward the indoor unit when controlling it.
The transmission sign blinks when a signal is sent.

ROOM AIR CONDITIONER NAMES AND FUNCTIONS OF REMOTE CONTROL UNIT

START/STOP button

Press this button to start operation.
Press it again to stop operation.

SLEEP button

Use this button to set the sleep timer.

OFF TIMER Button

Select the turn OFF time.

ON TIMER Button


Select the turn ON time.

RESERVE Button

Time setting reservation.

CANCEL Button

Cancel time reservation.

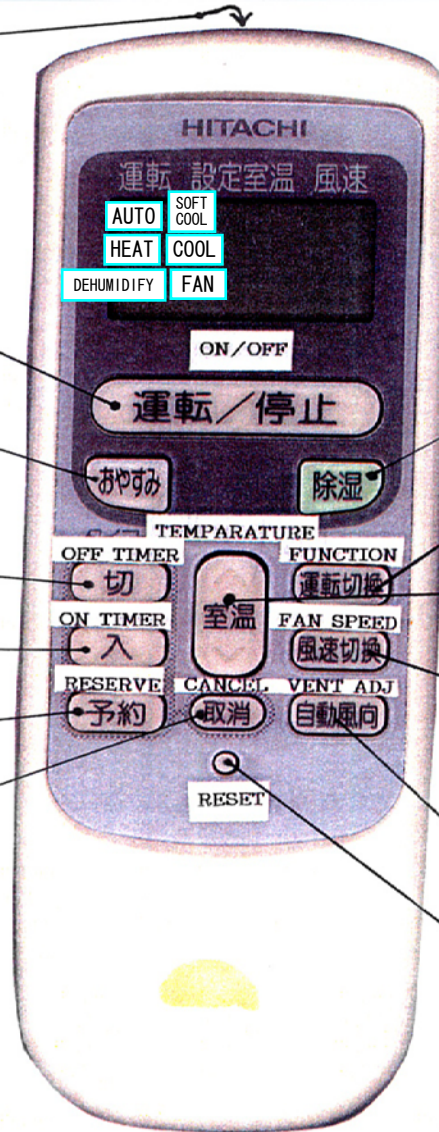

DEHUMIDIFY button

Dehumidify mode direct selection.

FUNCTION selector

Use this button to select the operating mode.
Every time you press it, the mode will change
as the below sequence.
(AUTO)→(HEAT)→(DRY)→(COOL)→(FAN)

TEMPERATURE buttons

Use these buttons to raise or lower
the temperature setting.
(Keep pressed, and the value will
change more quickly.)

FAN SPEED selector

Every time you press the button, fan speed
will change as the below sequence.

HEATING : AUTO→HIGH→MED→LOW
COOLING }

DEHUMIDIFYING : LOW (fixed)
FANNING : HIGH→MED→LOW

AUTO SWING button

Controls the angle of the horizontal air
deflectors.

RESET button

Press this button after battery change or if
operation seems unusual.

Precaution for Use

- Handle the remote controller carefully. Do not drop it on the floor, and protect it from water.
- Once the outdoor unit stops, it will not restart for about 3 minutes (unless you turn the power switch off and on or unplug the power cord and plug it in again).

This is to protect the device and does not indicate a failure.

RAS-22:RX形