

☺What to do when A/C does not work well☺

(This is for NATIONAL A/C only)

1. RESET A/C

☆Unplug the A/C and plug it back in 15 minutes later.

☆Press ①本体リセット(reset) button on a remote control for 5 sec.
with a toothpick or something pointy, then press the ON/OFF button.


2. DIAGNOS AN ERROR CODE

☆ Press ②診断(diagnosis) button with a toothpick or something pointy on the remote control until numbers appear on the screen.

☆ Press the ③temp. button, which change a number on the screen, until when it beeps like “Pi Pi” (not only one time “Pi”)

☆When you hear the “Pi Pi” sounds, check the number on the screen, inform TOKUZATO HOUSING.

(The error codes help us assume what would be wrong with the A/C.)

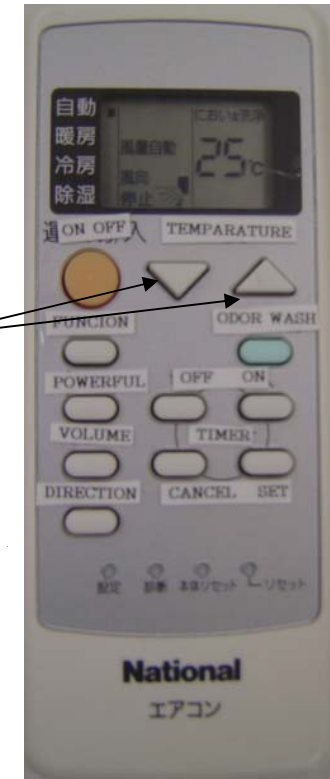

Temp.③

診断 ②

①
本体リセット